

Priming evercare® inLine, vented with bottle

REF: 10499, 10500-01, 10501-01, 10502-01, 10503-01, 10570-01, 10504-01, 10505-01, 10506-01, 10577-01, 10578-01, 10579-01, 10580-01, 10581-01, 10582-02, 10585-02, 10700, 10701, 10702, 10703, 10704, 10705, 10706, 10707, 10708, 10709, 10710, 10711, 10712, 10714.


Priming recommendation to prime evercare® inLine infusion set when using glass bottle.

Please note! See the package for complete IFU instructions for use, this is only a guide for users. **DO NOT OVER-TIGHTEN** connections. **DO NOT USE** any instruments to tighten connections. Tip: Glass and non fully collapsible containers: Keep the vent closed during spiking and priming. Only open the vent flap when venting is required.

1


Unwrap the IV-set and check whether the air vent cap is closed and the roller clamp is open.

Important: Do not open the air vent!

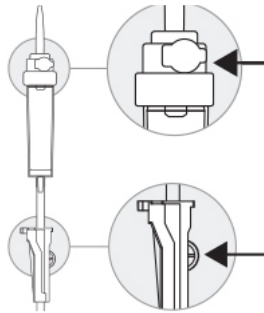

2

 
Change position of the roller clamp and control that the tubing is unaffected and close it.



3


Place the bottle on a surface and spike the membrane. Hang the bottle on a IV pole or similar.

Keep the air vent closed!

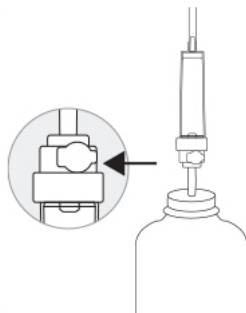


4

Attach the tubing to the tube holder at the roller clamp.

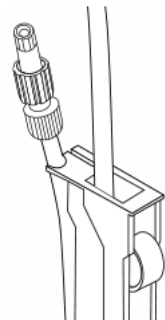

5


Squeeze gently the drip chamber 3–5 times to fill half of the drip chamber. (Too aggressive squeeze can lead to mixed air fluid below the drip chamber.)

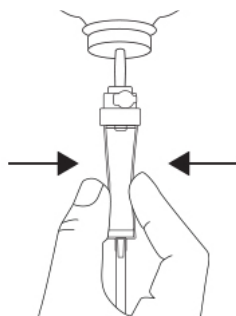

6

Open the roller clamp until the complete tubing is primed.

Keep the air vent closed!

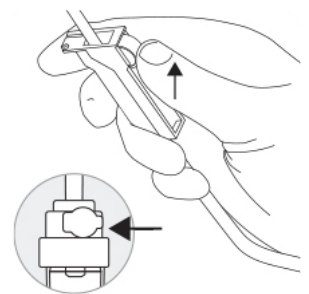

Priming evercare® inLine, vented with bottle


REF: 10499, 10500-01, 10501-01, 10502-01, 10503-01, 10570-01, 10504-01, 10505-01, 10506-01, 10577-01, 10578-01, 10579-01, 10580-01, 10581-01, 10582-02, 10585-02, 10590, 10591, 10700, 10701, 10702, 10703, 10704, 10705, 10706, 10707, 10708, 10709, 10710, 10711, 10712, 10714.

Priming recommendation to prime evercare® inLine infusion set when using glass bottle.

Please note! See the package for complete IFU instructions for use, this is only a guide for users. **DO NOT OVER-TIGHTEN** connections. **DO NOT USE** any instruments to tighten connections. Tip: Glass and non fully collapsible containers: Keep the vent closed during spiking and priming. Only open the vent flap when venting is required.

7

Close the roller clamp.

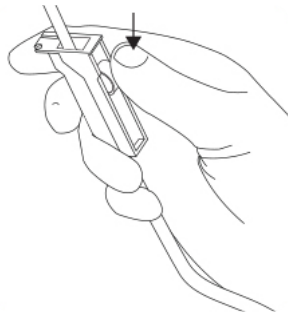

8

After priming, open the air vent.

